



WD2 110D AND 110F SEDAN WIRING DIAGRAMS. THE 120 (STATION WAGON) HAS AN ADDITIONAL INTERIOR LAMP WIRED FROM FUSE 30

- | | | | |
|---|---|---|--|
| 1 Front parking and directional signal lights | 9 Directional signal flasher unit | 19 Fuel reserve supply indicator | 27 Generator regulator |
| 2 High and low beam headlights | 10 Wiper motor | 20 Low oil pressure indicator | 28 Generator |
| 3 Side directional signal lights | 11 Courtesy light jam switch on driver's side door pillar | 21 High beam indicator | 29 Starter motor |
| 4 Fuses | 12 Directional signal switch | 22 Instrument light switch | 30 Ignition coil |
| 5 Horn | 13 Horn button | 23 Map light in rear view mirror | 31 Spark plugs |
| 6 Battery | 14 Change-over switch for lighting and flashers | 24 Lighting master switch | 32 Ignition distributor |
| 7 Stop light pressure-operated switch | 15 Directional signal indicator | 25 Key type ignition switch, also energizing starting and warning lights circuits | 33 Low oil pressure indicator sending unit |
| 8 Fuel reserve supply indicator sending unit | 16 Instrument light | 26 Windshield wiper switch | 34 Rear tail, stop and directional signal lights |
| | 17 Parking light indicator | | 35 Number plate light |
| | 18 No-charge indicator | | |