


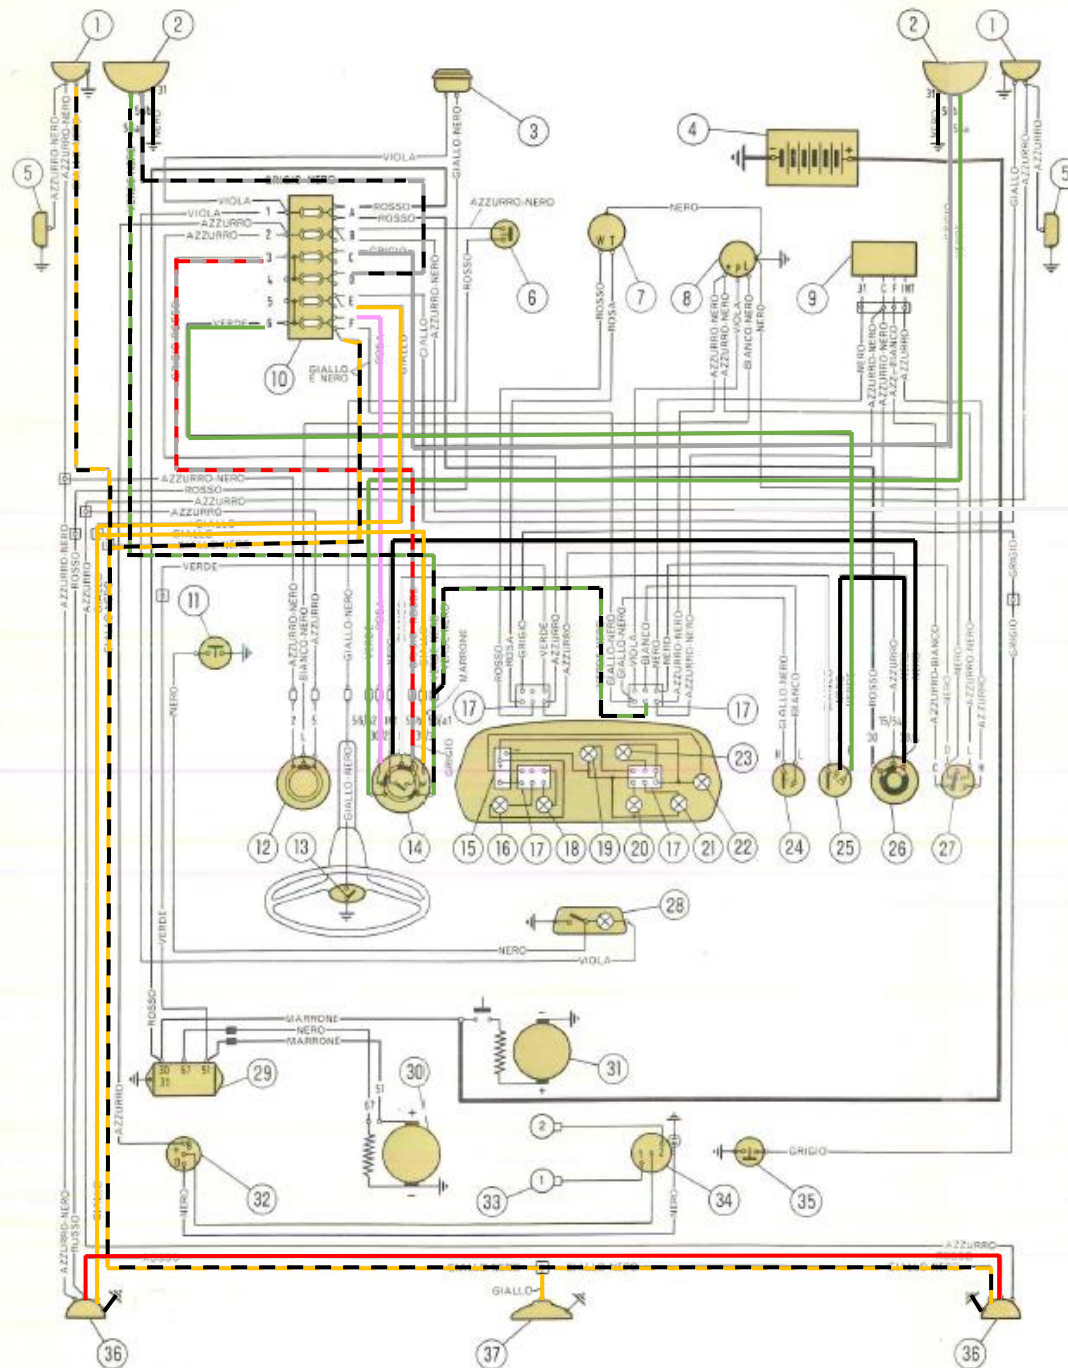

WIRING DIAGRAM

1. Front parking and direction indicator lamps.
2. Headlamps (high and low beams).
3. Horn.
4. Battery.
5. Direction indicator side repeaters.
6. Stop lights pressure-operated switch.
7. Fuel gauge sending unit.
8. Flasher (direction indicators).
9. Windshield wiper motor.
10. Fuses.
11. Courtesy light jam switch on door pillar.
12. Direction indicators switch.
13. Horn button.
14. High/Low beams change-over switch (controls also headlamp low beam flashes).
15. Fuel gauge.
16. Fuel reserve indicator (red).
17. Electrical connectors.
18. Generator charge indicator (red).
19. Direction indicators arrow tell-tale (green).
20. Parking lights indicator (green).
21. High beam indicator (blue).
22. Insufficient oil pressure indicator (red).
23. Instrument cluster light.
24. Instrument cluster light switch.
25. Outer lighting switch.
26. Lock switch.
27. Windshield wiper switch.
28. Rear view mirror light (courtesy).
29. Generator regulator.
30. Generator.
31. Starter motor.
32. Ignition coil.
33. Spark plugs.
34. Ignition distributor.
35. Insufficient oil pressure indicator sending unit.
36. Rear parking, stop and direction indicator lamps.
37. Number plate lamp.

Note. - Mark = means that cable is provided with numbered strip or ferrule.

KEY TO CABLE COLORS

Arancione = Orange	Giallo = Yellow	Rosa = Pink
Azzurro = Light blue	Grigio = Grey	Rosso = Red
Blu = Dark blue	Marrone = Brown	Verde = Green
Bianco = White	Nero = Black	Viola = Violet